SEVENERGY

24200-250L-BT

https://mysevenergy.com/contact/

SEVENERGY Support Center

LiFePO4 Battery

Model: 24200-250L-BT

SEVENERGY

Powering the Future

Model: 24200-250L-BT



This is the original instruction, please read all manual instructions carefully before operating. SEVENERGY reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

⚠ Warning: Read this entire document before installing or using the product. Failure to do so or to follow any of the instructions or warnings in this document can result in electrical shock, serious injury, or death, or can damage the product, potentially rendering it inoperable.

PRODUCT SPECIFICATIONS

All specifications and descriptions contained in this document are verified to be accurate at the time of printing. However, because continuous improvement is a goal at SEVENERGY, we reserve the right to make product modifications at any time.
The images provided in this document are for demonstration purposes only. Depending on product version and market region, details may appear slightly different.

ERRORS OR OMISSIONS

To report inaccuracies or omissions in this manual, please contact SEVENERGY.



ELECTRONIC DEVICE: DO NOT THROW AWAY

Proper disposal of batteries is required. Refer to your local codes for disposal requirements

2025 SEVENERGY. All rights reserved.

All information in this document is subject to copyright and other intellectual property rights of SEVENERGY and its licensors. This material may not be modified, reproduced or copied, in whole or in part, without the prior written permission of SEVENERGY and its licensors. Additional information is available upon request. The following are trademarks or registered trademarks of SEVENERGY NEW ENERGY.

All other trademarks contained in this document are the property of their respective owners. Their use herein does not imply sponsorship or endorsement of their products or services.

The unauthorized use of any trademark displayed in this document or on the product is strictly prohibited.

IMPORTANT SAFETY INSTRUCTIONS

This manual contains important instructions for the product that must be followed during installation and maintenance of the system. Product installation and service require knowledge of high voltage electricity and should only be performed by Certified Installers. SEVENERGY assumes no liability for injury or property damage due to repairs attempted by unqualified individuals or a failure to properly follow these instructions. These warning and cautions must be followed when using the product.

SYMBOLS USED

These symbols indicate important safety information in this guide or on the equipment:



WARNING
indicates a hazardous situation which, if not avoided, could result in injury or death.

CAUTION
indicates a hazardous situation which, if not avoided, could result in minor injury or damage to the equipment.

NOTE
indicate an important step or tip that leads to best results, but is not safety or damage related.



REFER TO OPERATING INSTRUCTIONS
indicates that user should refer to operating or installation instructions before proceeding.



RISK OF ELECTRIC SHOCK
indicates components that present risk of electrical shock.



CAUTION, RISK OF ELECTRIC SHOCK, ENERGY STORAGE TIMED DISCHARGE
Discharge time is 5 minutes from de-energization.

ENVIRONMENTAL CONDITIONS

⚠ WARNING: Reading this entire document before installing or using the product. Failure to do so or to follow any of the instructions or warnings in this document can result in electrical shock, serious injury, or death or can damage SEVENERGY, potentially rendering it inoperable.

⚠ WARNING: A battery can present a risk of electrical shock, fire, or explosion from vented gases. Observe proper precautions.

⚠ WARNING: Do not use the product if it is defective, appears cracked, broken, or otherwise damaged, or fails to operate.

⚠ WARNING: Do not attempt to open, disassemble, repair, tamper with, or modify the product. The product and its components are not user serviceable. Batteries in SEVENERGY are replaceable. Contact the Certified Invstaller who installed the system for any repairs.

⚠ CAUTION: Do not use fluids, parts or accessories other than those specified in this manual including use of non/genuine SEVENERGY parts or accessories, or parts or accessories not purchased directly from SEVENERGY or a SEVENERGY ENERGY-certified party.

⚠ CAUTION: Do not place the product in a storage condition for more than one (1) month, or permit the electrical feed on the product to be served for more than one (1) month, without placing the product into a storage condition in accordance with SEVENERGY-s storage specifications.

⚠ CAUTION: Do not connect the product directly to photo voltaic (PV) solar wiring.

REVISION HISTORY

Date	Revision	Description	Owner
2025-02-15	V1.0	Initial Release	

⚠ Avertissement: Lisez l'intégralité de ce document avant d'installer ou d'utiliser le produit.Le non-respect de cette consigne ou de l'une des instructions et avertissements contenus dans ce document peut entraîner des chocs électriques, des blessures graves voire mortelles, ou endommager le produit au point de le rendre inutilisable.

CARACTÉRISTIQUES DU PRODUIT

Toutes les caractéristiques et descriptions figurant dans ce document sont vérifiées exactes au moment de l'impression. Cependant, SEVENERGY vise une amélioration continue de ses produits et se réserve le droit d'apporter des modifications à tout moment.

Les images fournies dans ce document sont uniquement à titre d'illustration. Les détails peuvent présenter de légères différences selon la version du produit et la région commerciale.

ERRORS OR OMISSIONS

Pour signaler toute imprécision ou omission dans ce manuel, veuillez contacter SEVENERGY.



APPAREIL ÉLECTRONIQUE: NE PAS JETER

La mise au rebut correcte des batteries est obligatoire. Reportez-vous aux réglementations locales applicables en matière d'élimination..

© 2025 SEVENERGY. Tous droits réservés.

Toutes les informations de ce document sont soumises au droit d'auteur et aux autres droits de propriété intellectuelle de SEVENERGY et de ses concédants. Aucune partie de ce document ne peut être modifiée, reproduite ou copiée, en tout ou en partie, sans l'autorisation écrite préalable de SEVENERGY et de ses concédants. Des informations complémentaires peuvent être fournies sur demande. Les marques citées ci dessous sont des marques déposées ou des marques commerciales de SEVENERGY.

Toutes lesautresmarquescommerciales apparaissant dans ce document appartiennent à leurs propriétaires respectifs ; leur utilisation dans ce document n'implique aucun parrainage ni approbation de leurs produits ou services.

Toute utilisation non autorisée d'une marque figurant sur ce document ou sur le produit est strictement interdite.

CONSIGNES DE SÉCURITÉ IMPORTANTES

Ce manuel contient des instructions importantes à respecter lors de l'installation et de la maintenance du système.
L'installation et l'entretien du produit requièrent des connaissances en électricité haute tension et doivent être réalisés exclusivement par des installateurs certifiés.
SEVENERGY décline toute responsabilité en cas de blessures ou de dommages matériels résultant de réparations tentées par des personnes non qualifiées ou du non respect des présentes instructions. Ces avertissements et mises en garde doivent être respectés lors de l'utilisation du produit.

SYMBOLES UTILISÉS

Ces symboles signalent des informations de sécurité importantes dans ce guide ou sur l'équipement :

AVERTISSEMENT

indique une situation dangereuse qui, si elle n'est pas évitée, peut entraîner des blessures voire la mort.

ATTENTION

indique une situation dangereuse qui, si elle n'est pas évitée, peut entraîner des blessures légères ou endommager l'équipement.

REMARQUE

indique une étape ou un conseil important pour obtenir un résultat optimal, sans lien avec la sécurité ni les risques de dommage.

CONSULTER LES INSTRUCTIONS D'UTILISATION

indique que l'utilisateur doit se reporter aux instructions d'utilisation ou d'installation avant toute manipulation.

RISQUE DE CHOC ÉLECTRIQUE

signale des composants présentant un risque de choc électrique.

ATTENTION, RISQUE DE CHOC ÉLECTRIQUE, DÉCHARGE ÉNERGÉTIQUE DIFFÉRÉE

la décharge s'effectue 5 minutes après la mise hors tension.

CONDITIONS ENVIRONNEMENTALES

AVERTISSEMENT : Lisez l'intégralité de ce document avant d'installer ou d'utiliser le produit. Le non respect de cette consigne ou de l'une des instructions et avertissements contenus dans ce document peut entraîner des chocs électriques, desblessures graves voire mortelles, ou endommager le produit SEVENERGY au point de le rendre inutilisable.

AVERTISSEMENT : Une batterie peut présenter des risques de choc électrique, d'incendie ou d'explosion dus aux gaz émis. Respectez toutes les précautions nécessaires.

AVERTISSEMENT : N'utilisez pas le produit s'il est défectueux, fissuré, cassé, endommagé de quelque manière que ce soit ou s'il ne fonctionne pas correctement.

AVERTISSEMENT : N'essayez pas d'ouvrir, de démonter, de réparer, de modifier ou d'altérer le produit. Le produit et ses composants ne comportent aucune pièce réparable par l'utilisateur.
Les batteries SEVENERGY sont remplaçables. Pour toute réparation, contactez l'installateur certifié qui a mis en place le système.

ATTENTION : N'utilisez aucun fluide, pièce ou accessoire autre que ceux spécifiés dans ce manuel, y compris les pièces ou accessoires non authentiques de SEVENERGY, ou des articles non achetés directement auprès de SEVENERGY ou d'un partenaire certifié SEVENERGY.

ATTENTION : Ne laissez pas le produit en stockage pendant plus d'un (1) mois, et ne laissez pas ses connexions électriques sous tension plus d'un (1) mois, sans respecter les consignes de stockage définies par **SEVENERGY**.

ATTENTION : Ne branchez pas le produit directement sur le câblage des panneaux solaires photovoltaïques (PV).

CONTENTS

Page numbers below refer to the printed page numbers.

English safety and general information 1

French safety and general information 4

Specifications 8

Packing list and mechanical specification 9

Dimensions and cable sizing 10

Choose a mounting site 11

Installation preparation 12

Single-battery installation 13

Balance batteries for parallel connection 16

Series and parallel connections 18

Connection configurations 21

Battery charging and discharging logic 22

Solar panels and controller settings 24

Battery charger / alternator / generator 25

SOC reference and troubleshooting 26

Maintenance and inspection 28

Storage and safety 29

FCC statements 30

Bluetooth app 32

SPECIFICATION




FRONT VIEW



TOP VIEW


Technical Parameters	24200-250L-BT
Cell Type	LiFePO4
Rated Capacity	200Ah
Rated Battery Energy	5.12kWh
Rated Voltage	25.6V
Working Voltage Range	20.4~28.8V
Usable Battery Capacity	5.12kWh
Parallel Quantity	8S2P (5.12KWh Max)
Nominal Current (Recommended)	40A
Battery Depth of Discharge	100%
Battery Max Charge/Discharge Power	5.12kW
Available SOC Range	0% ~ 100%
SOC Transportation Range	40%
Operating Temperature	Charging Temperature: 0℃~50℃ Discharge Temperature: -20℃~55℃
Storage Temperature	-20°C ~ 45°C
Working Humidity	5~95%RH
Standard Charging Current	0.2C, 40A
Maximum Charging Continuous Current	1C, 200A
Continuous/Peak Discharge	200A(600A 3S/800A 1S)
Rated DC Power	5.12kW
IP Grade	IP65
Recommended Indoor/Outdoor Usage	Indoor/Outdoor
Weight	40 kg (88.2 lb)
Dimensions (W*D*H)	L520±3*W268±3*H220.2±3mm (L20.47*W10.55*H8.67 inch)

Packing List

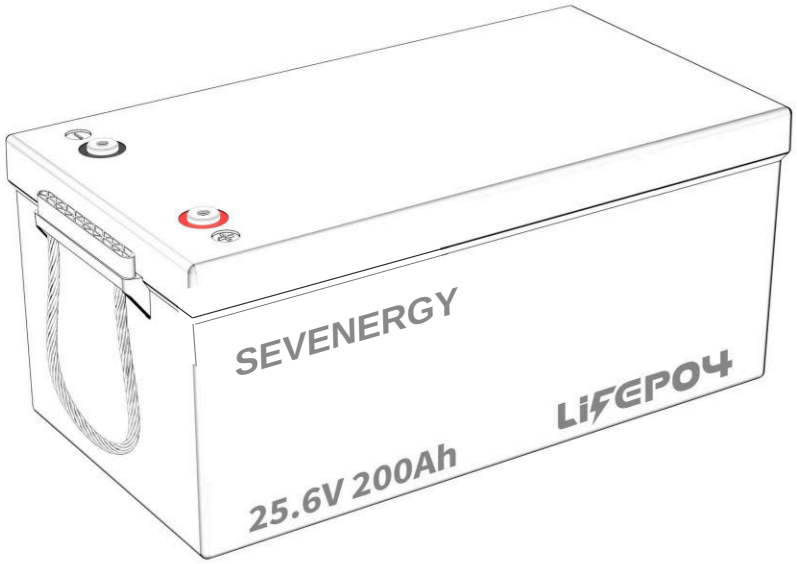

25.6V 200Ah
Smart Lithium lron Phosphate Battery x1

User Manual x1

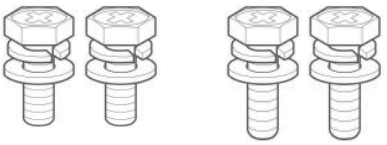

M8 x 12 mm
Terminal bolts x2


M8 x 16 mm
Terminal bolts x2

4 terminal bolts total


Make sure that all accessories are complete and free of any signs of damage.

Mechanical Specification

Top

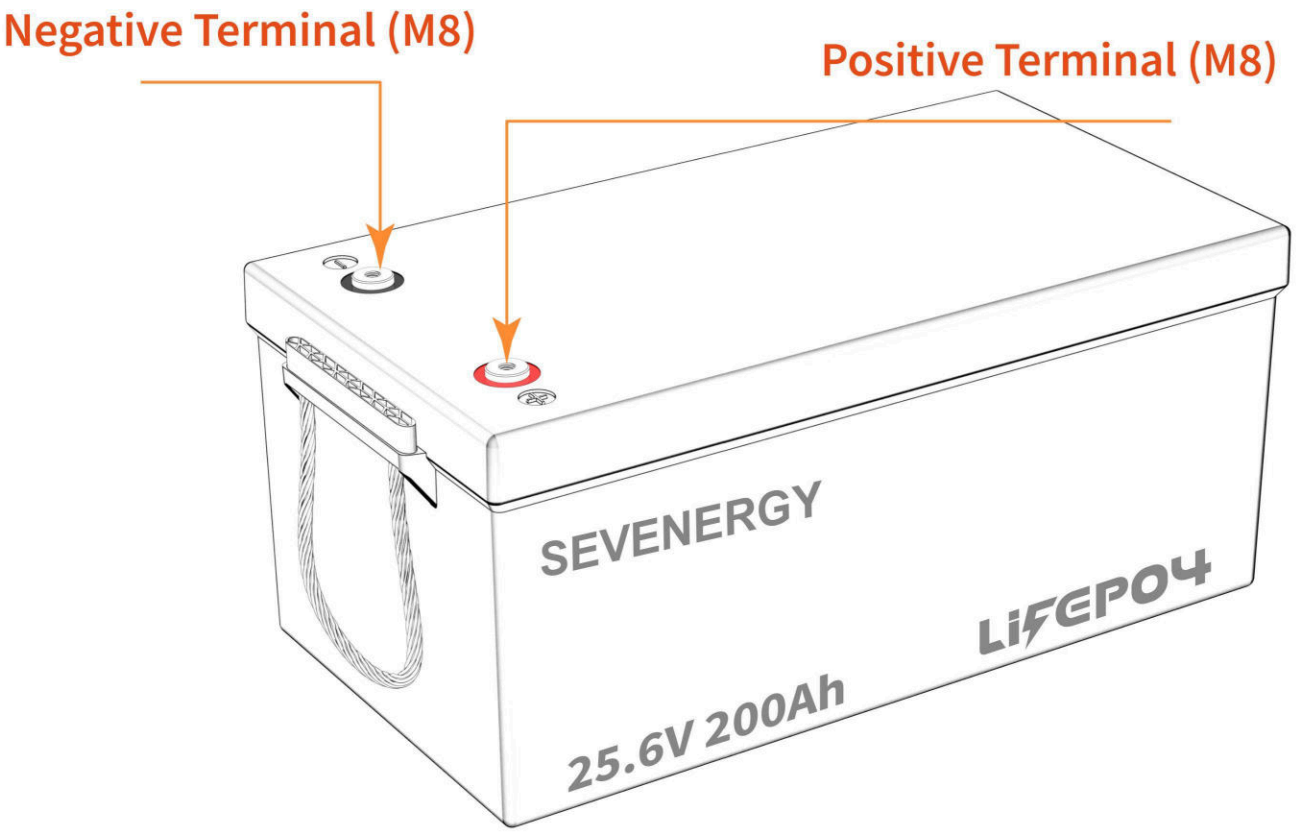

Dimensions

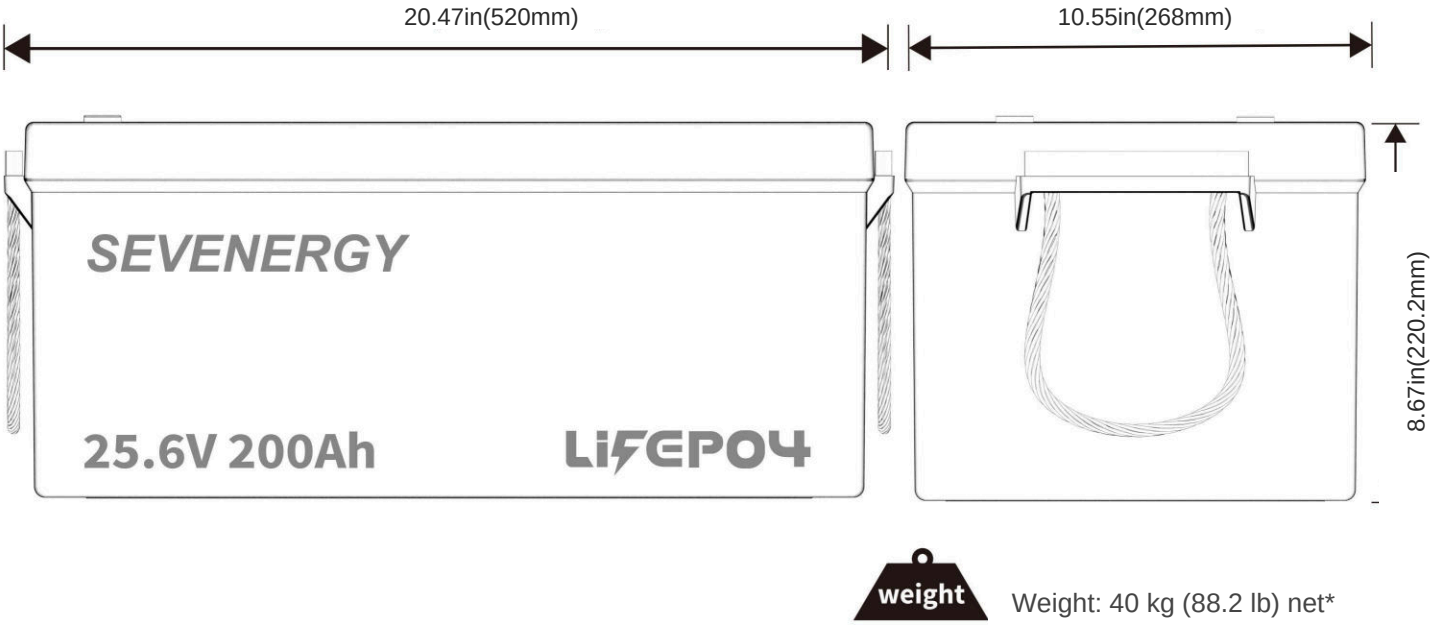

weight Weight: 40 kg (88.2 lb) net*

Dimension tolerance: ±0.2 in (0.5 mm)

To Size Battery Adapter Cables

Use appropriately sized Battery Adapter Cables (sold separately) based on expected load. Refer to the table below for copper cable ampacities with different gauge sizes.

Cable Gauge Size	Ampacity	Cable Gauge Size	Ampacity
15 AWG (1.5 mm^2)	16A	3 AWG (33.5 mm^2)	125A
13 AWG (2.5 mm^2)	25A	2 AWG (50 mm^2)	160A
9 AWG (6 mm^2)	35A	1 AWG (70 mm^2)	200A
7 AWG (12 mm^2)	50A	1/0 AWG (95 mm^2)	250A
6 AWG (16 mm^2)	80A	2/0 AWG (150 mm^2)	300A
4 AWG (25 mm^2)	100A	4/0 AWG (185 mm^2)	355A

The above values are from the NEC Table 310.17 for copper cables rated at 194°F (90°C), operating at an ambient temperature of no more than 86°F (30°C). Cables longer than 13 feet (4000 mm) may require thicker gauge wires to prevent excessive voltage drop in undersized wiring.


Choose a Mounting Site

For optimal battery performance, it is recommended to install the battery in a clean, cool, and dry location, free from any accumulation of water, oil, or dirt. Accumulation of such materials on the battery can lead to current leakage, self-discharge, and even short-circuiting.







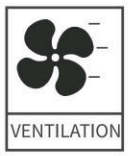




Min-20℃

Max+45℃

RH.+5%~+95%

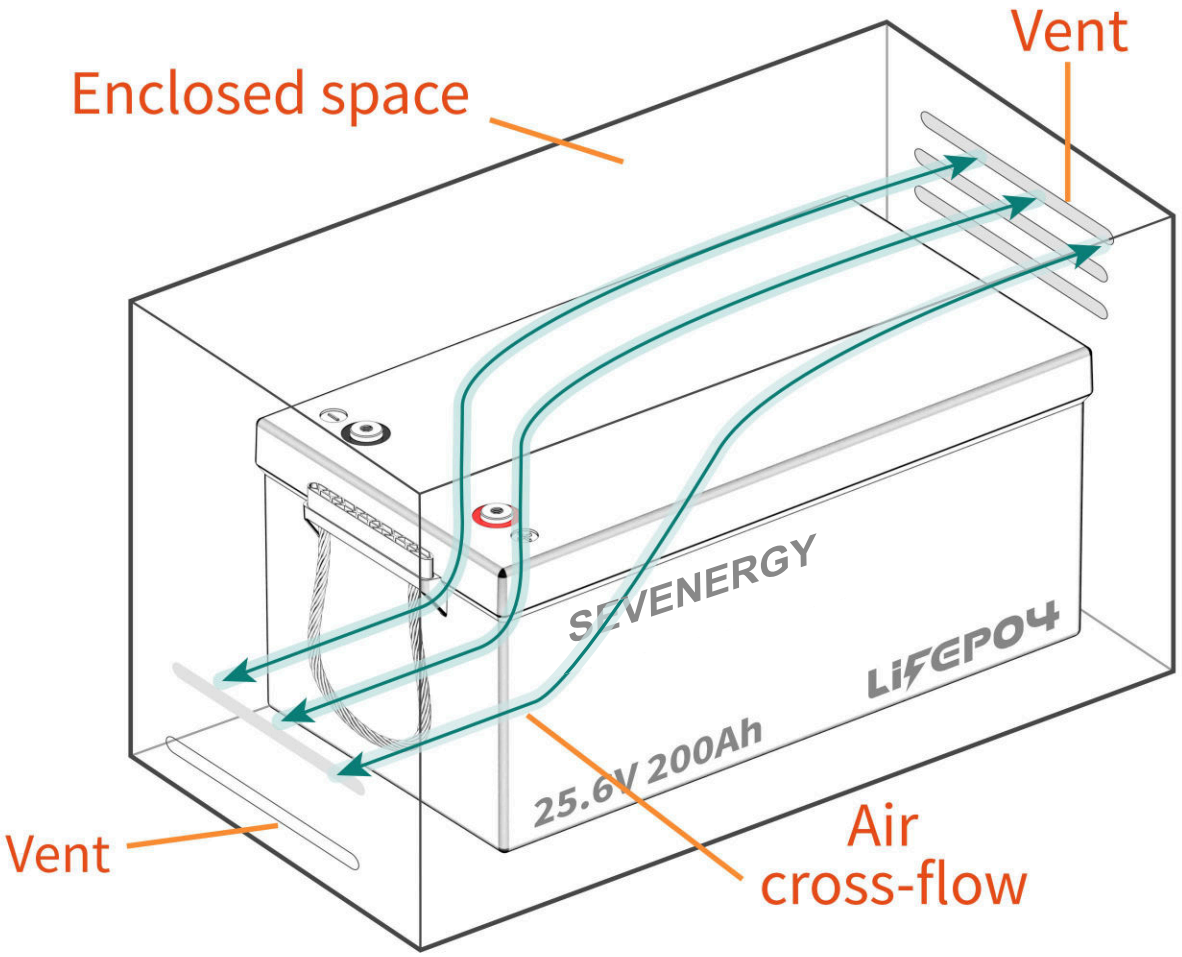


⚠ Sufficient airflow must be provided to prevent excessive heat build-up and to minimize temperature variation between the connected batteries.

ⓘ This user manual takes a battery as an example to illustrate how to install the battery.

Tools required for installation

Prior to installing and configuring the battery, prepare the recommended tools, components, and accessories.

1 Torque wrench

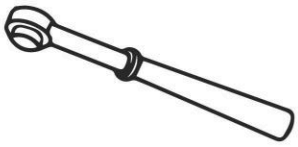

2 Wrench




3 Scissors




4 tie




5 Battery Adapter Cables × 2

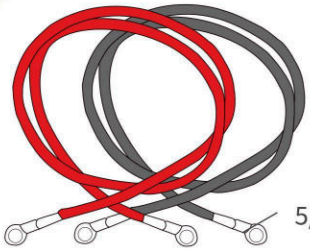

6 Insulating Gloves

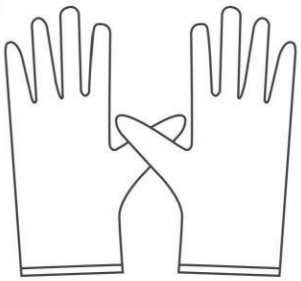


7 Multimeter

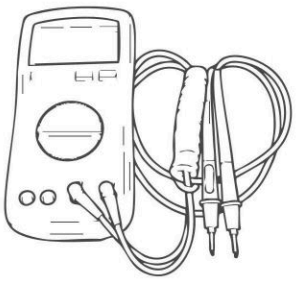


When assembling, ensure that parallel and series connection wires are of equal length.

Wear Insulating Gloves

Inspect the battery for any visible damage including cracks, dents, deformation, and other visible abnormalities. All connector contacts shall be clean, free of dirt and corrosion, and dry.

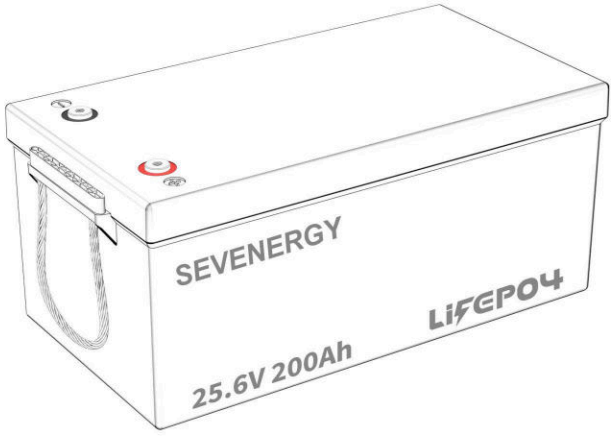

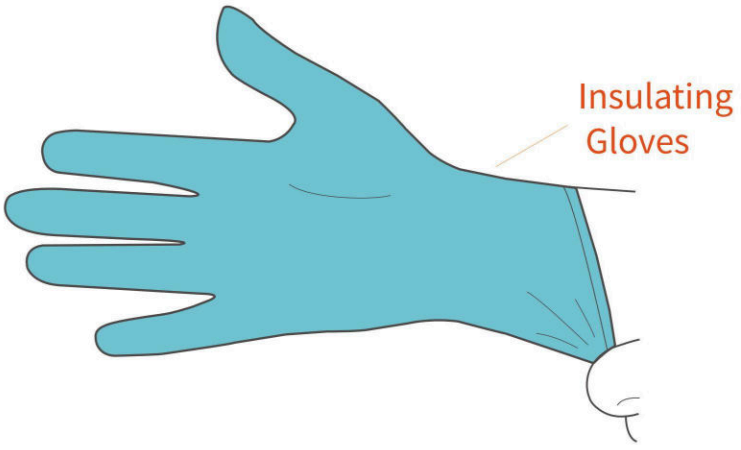

Do not touch the exposed electrolyte or powder if the battery is damaged.


If uncovered electrolyte or powder contacts your skin or eyes, flush it out immediately with plenty of clean water and seek medical attention.

If it is used as a single unit (1S1P)

Step 1


Check The Battery And Remove The Insulation Cover

Inspect the battery for any visible damage including cracks, dents, deformation, and other visible abnormalities. All connector contacts shall be clean, free of dirt and corrosion, and dry.

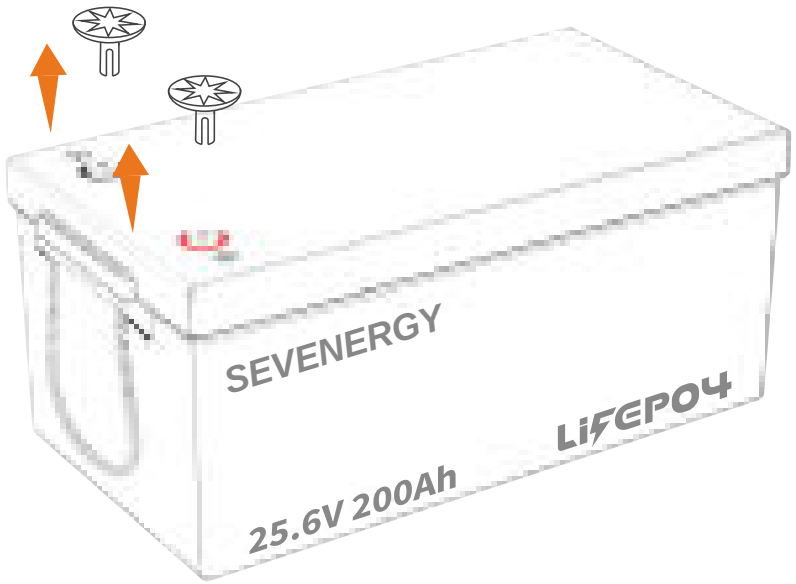


Step 2

Test The Battery Voltage with Multimeter

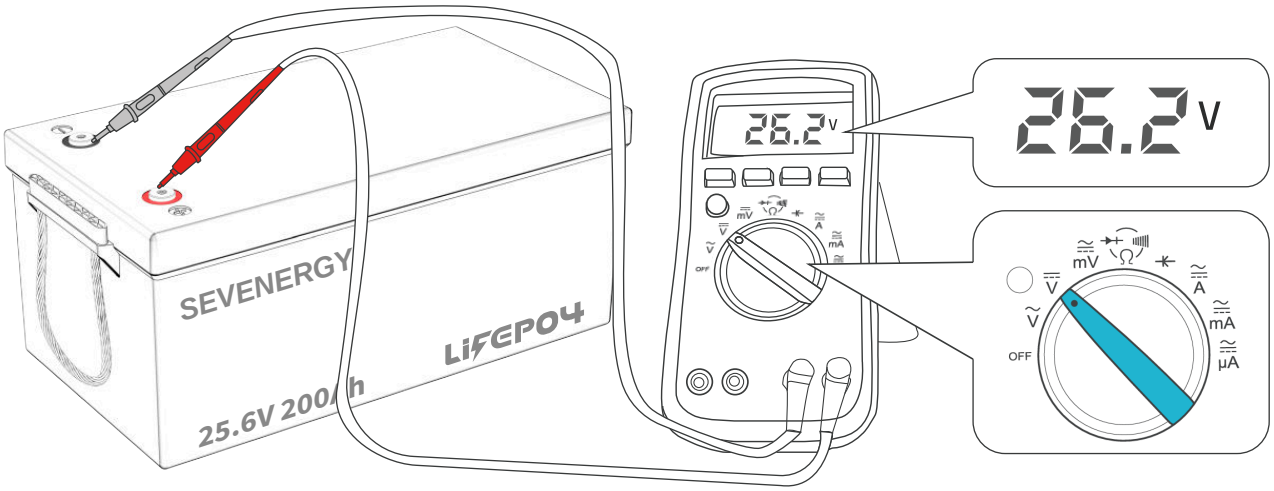

Step 3
Install Battery Terminals

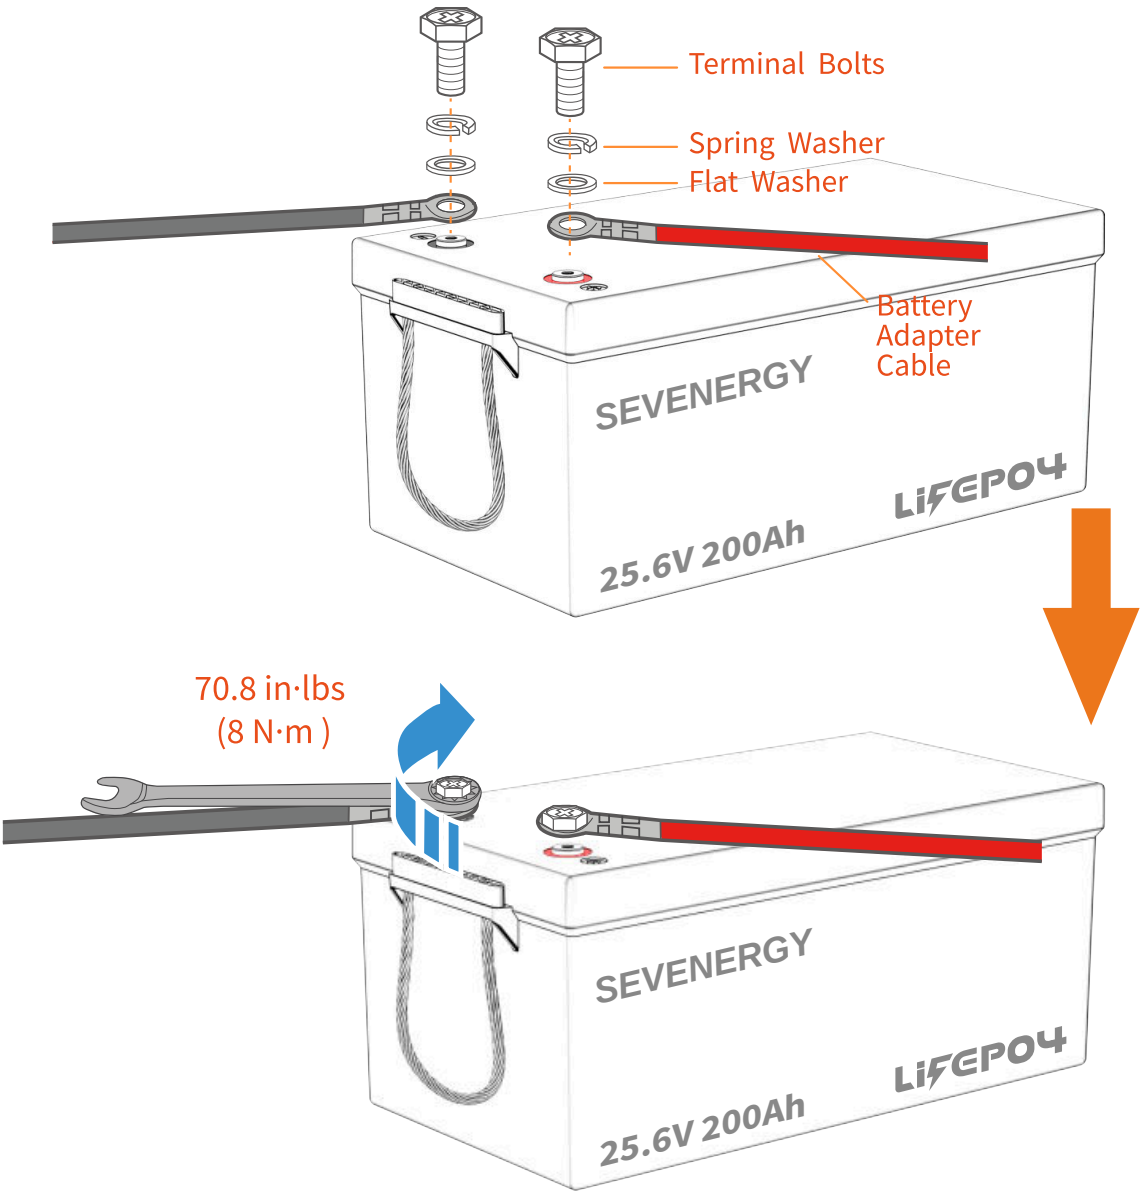

⚠ Ensure the cable lug and the top surface of the terminal are in contact, and place the washers on top of the lug. Do not place the washers between the battery terminal and the cable lug to avoid high resistance and excessive heating.

⚠ Avoid short-circuiting the battery terminals to prevent irreversible damage to the system and battery caused by current bursts.

⚠ Verify polarity before wiring to avoid irreversible battery damage due to polarity reversal.

⚠ Do not touch the positive and negative terminals of the battery with your hands.

Follow the manufacturer's torque specification when securing cable connections.
Over-tightening can break terminals; loose connections can overheat or cause fire.
Use the longer supplied bolts when securing multiple cable lugs on one terminal.
Use the torque wrench shown in the tools list (tool 1).


Supplied: M8 x 12 mm (2 pcs) + M8 x 16 mm (2 pcs).

Install one bolt per terminal (2 bolts per battery). Select the length for the cable-lug and washer stack, ensuring proper thread engagement.

Step 4

PUT ON Insulating Covers

Please put on the insulating covers to avoid metal or conductive objects touching the positive and negative terminals of the battery at the same time, otherwise it is likely to cause a short circuit.

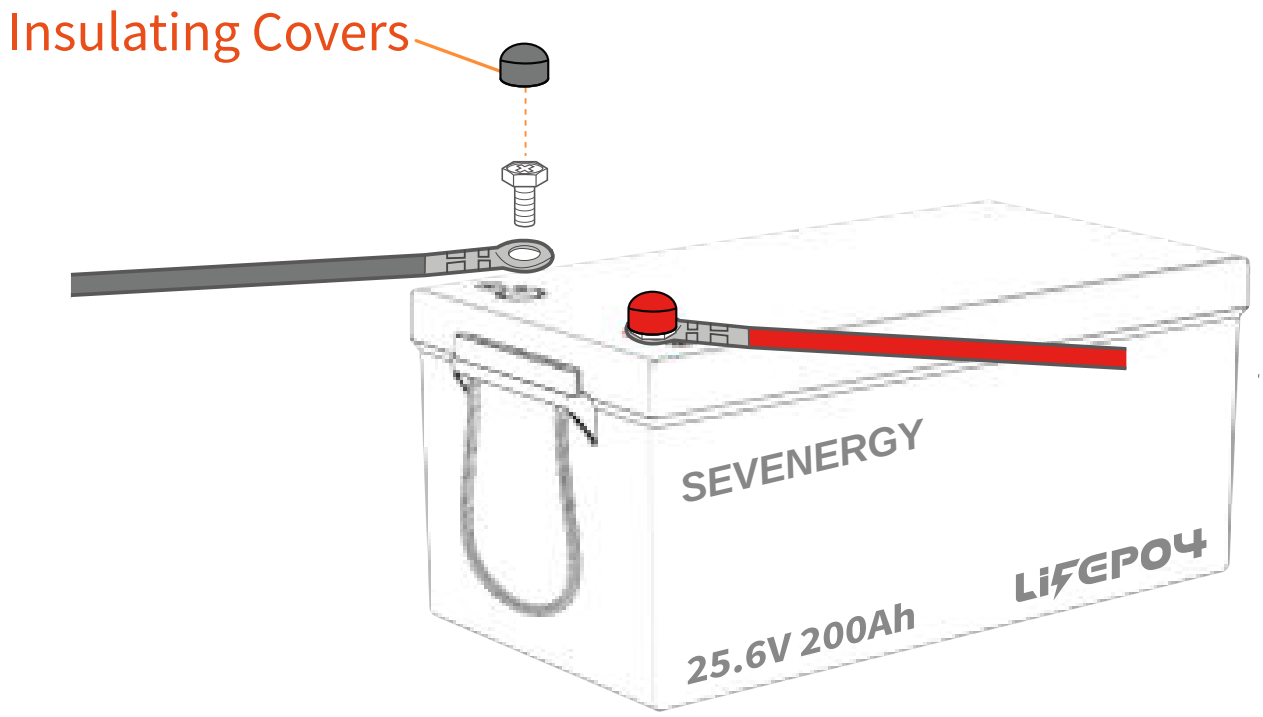

Step 5

Fully Charge The Battery Separately

(Refer to printed pages 22-25 for battery charging methods.)

Step 6

Connect the Battery to Other Devices

Please use circuit breakers, fuses, or disconnects appropriately sized by a certified electrician, licensed installers, or regional code authorities to protect all electrical equipment.


If you use 2 or more units in parallel

Balance Batteries Prior to Connection

Before connecting batteries in parallel, it is important to balance them to reduce voltage differences and optimize their performance. Follow these three steps: (You can choose suitable busbars in parallel connections. Busbars help handle high currents and are typically arranged in a parallel or stacked configuration to distribute electrical power efficiently.)


Step 1

Charge each battery individually to its full capacity using a suitable charger.

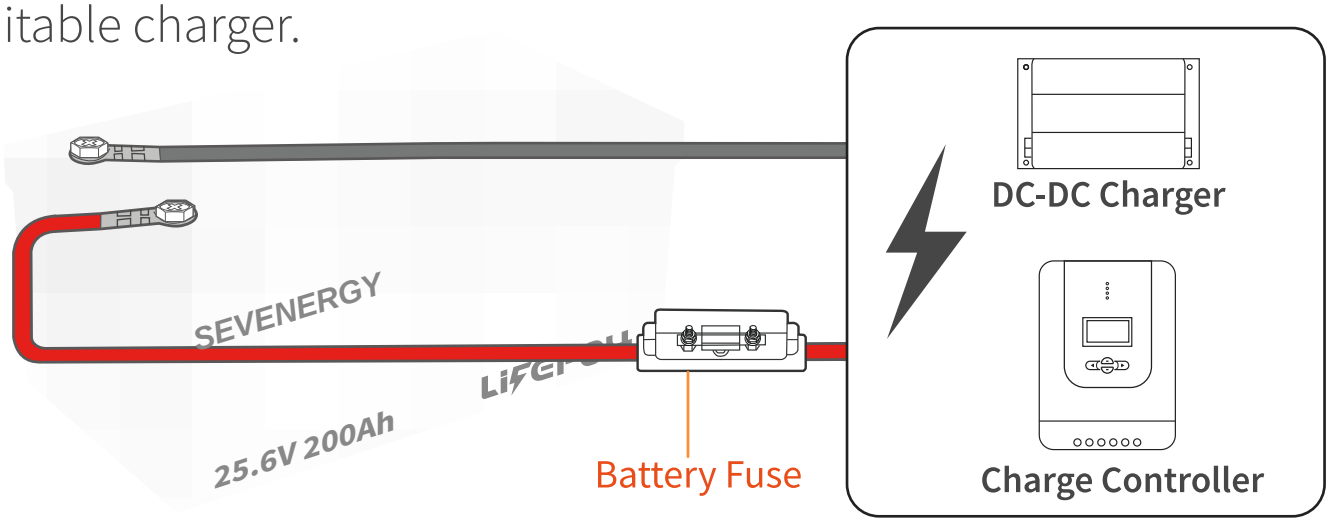


Step 2

Use a voltmeter to measure the voltage of each battery. It is best to keep the voltage difference of each battery less than 0.1V.

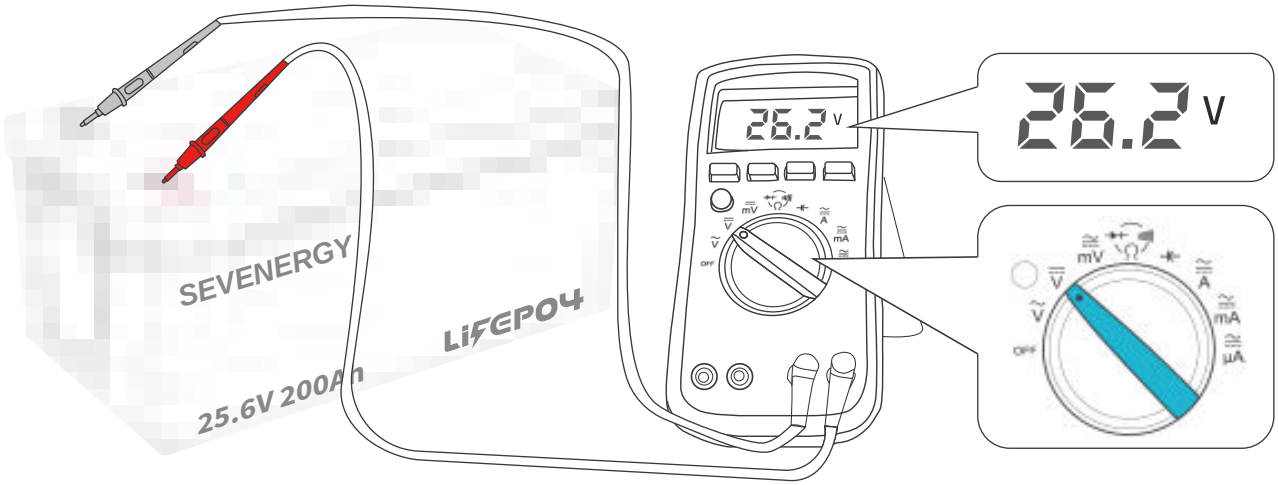

Step 3


Connect all the batteries in parallel and allow them to rest together for 12 to 24 hours.

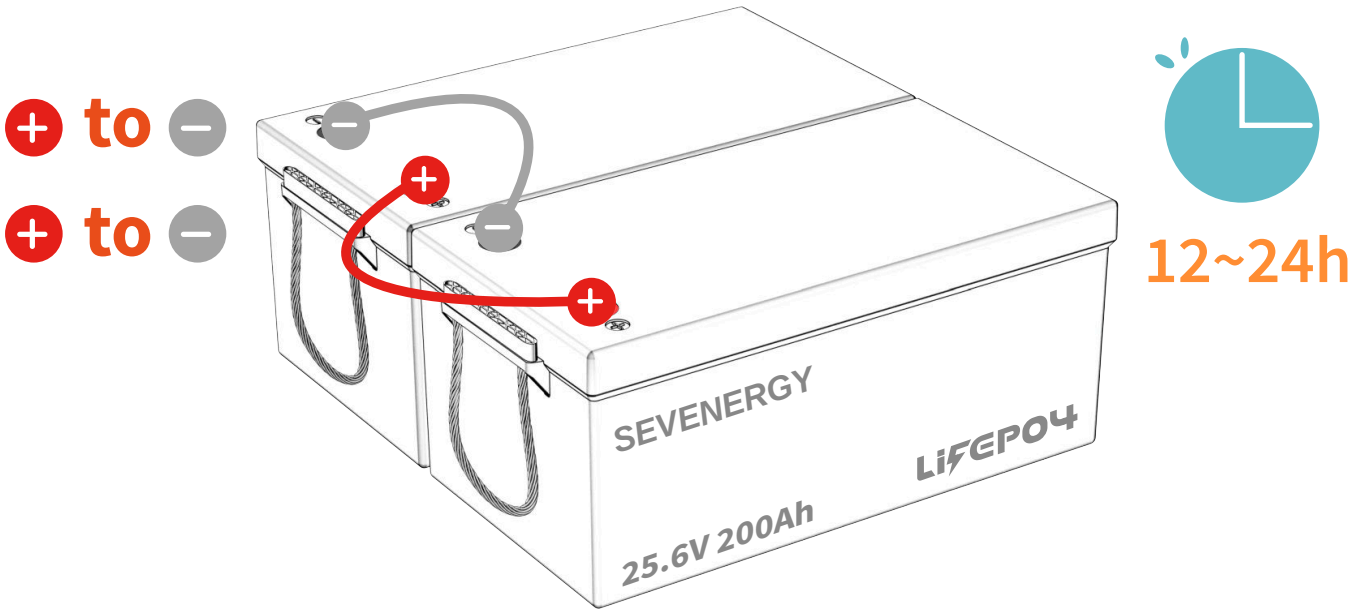

Refer to printed page 14 for terminal bolt installation and torque.

Step 4

Connect the 1# and 2# positive and negative poles to the busbars that match the current power. Then connect the busbar + and busbar - to the power supply end and the load end respectively.

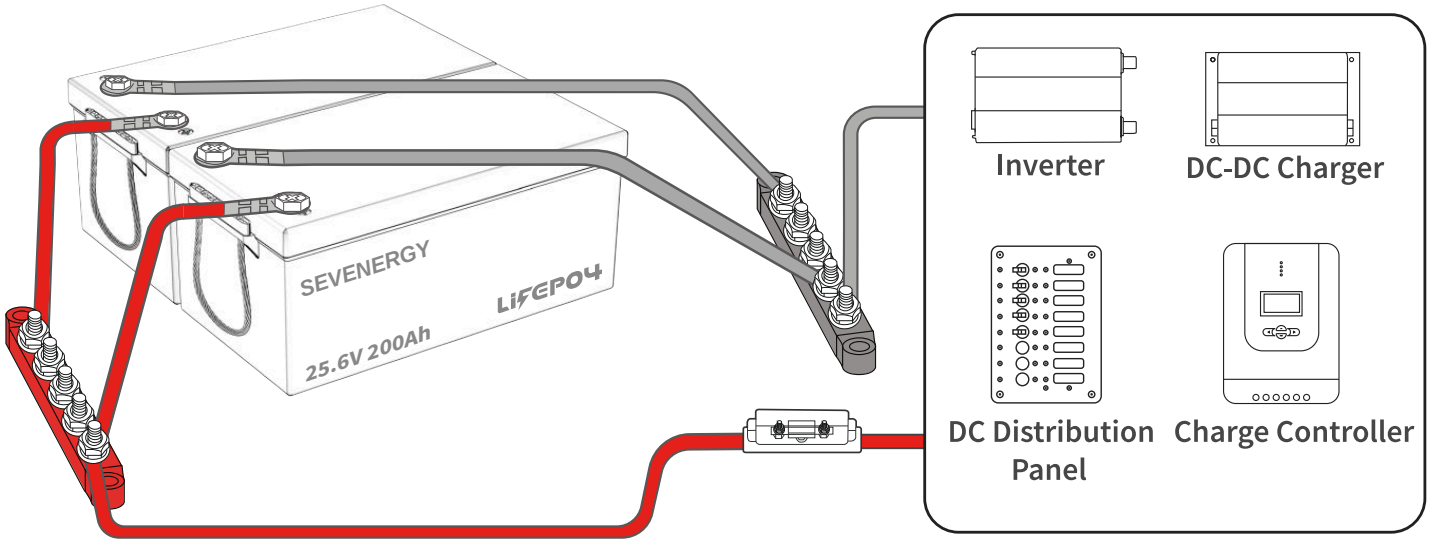


If you use 2 or more units in series or parallel:

You can choose suitable busbars in parallel connections. Busbars help handle high currents and are typically arranged in a parallel or stacked configuration to distribute electrical power efficiently


Step 1

Charge each battery individually to its full capacity using a suitable charger.

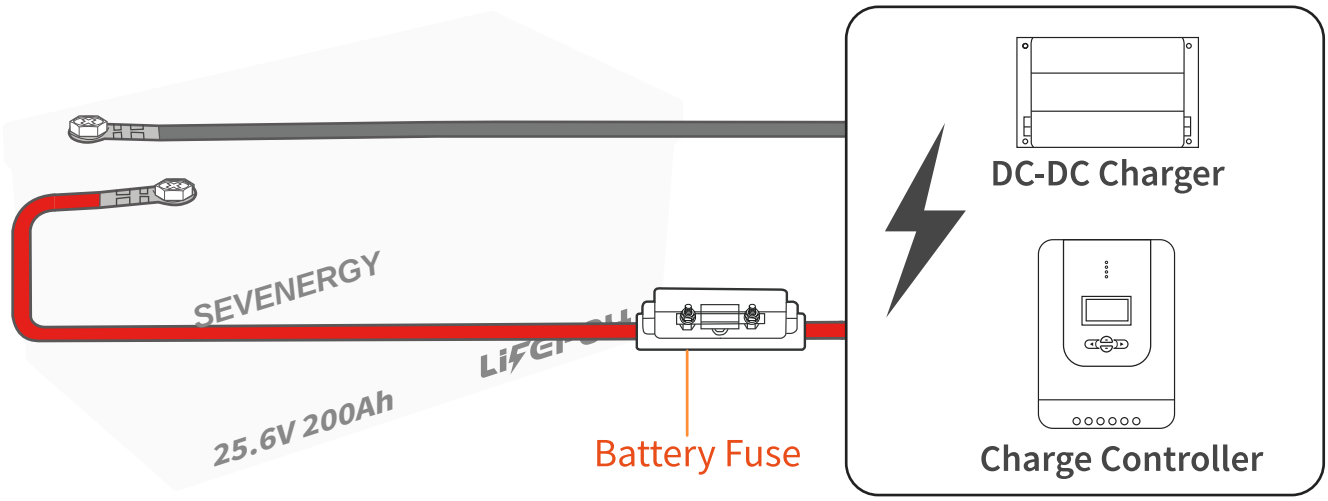


Step 2

Use a voltmeter to measure the voltage of each battery. It is best to keep the voltage difference of each battery less than 0.1V.

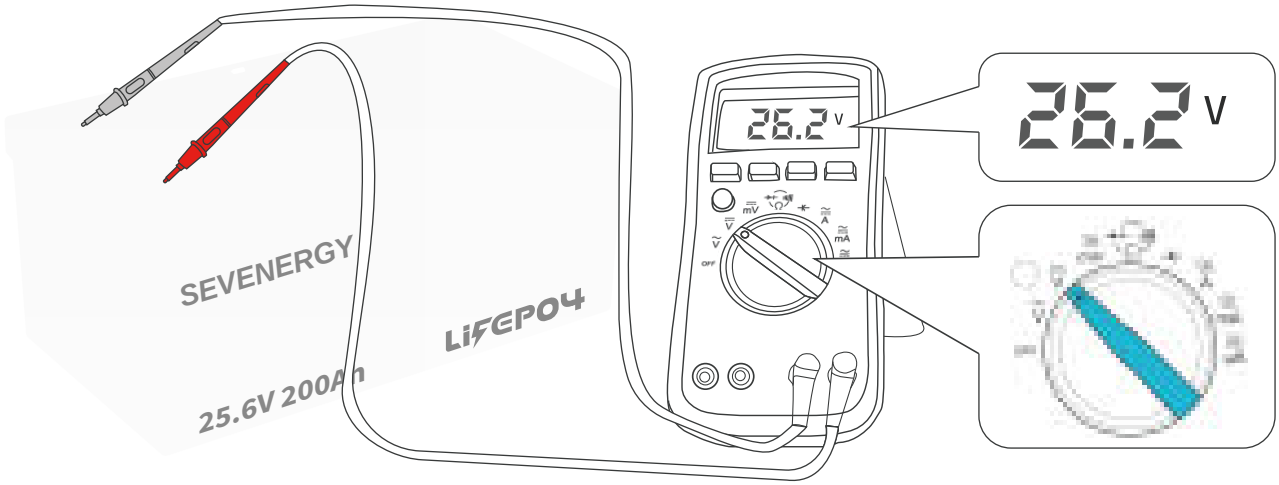

Step 3


Connect all the batteries in parallel and allow them to rest together for 12 to 24 hours.

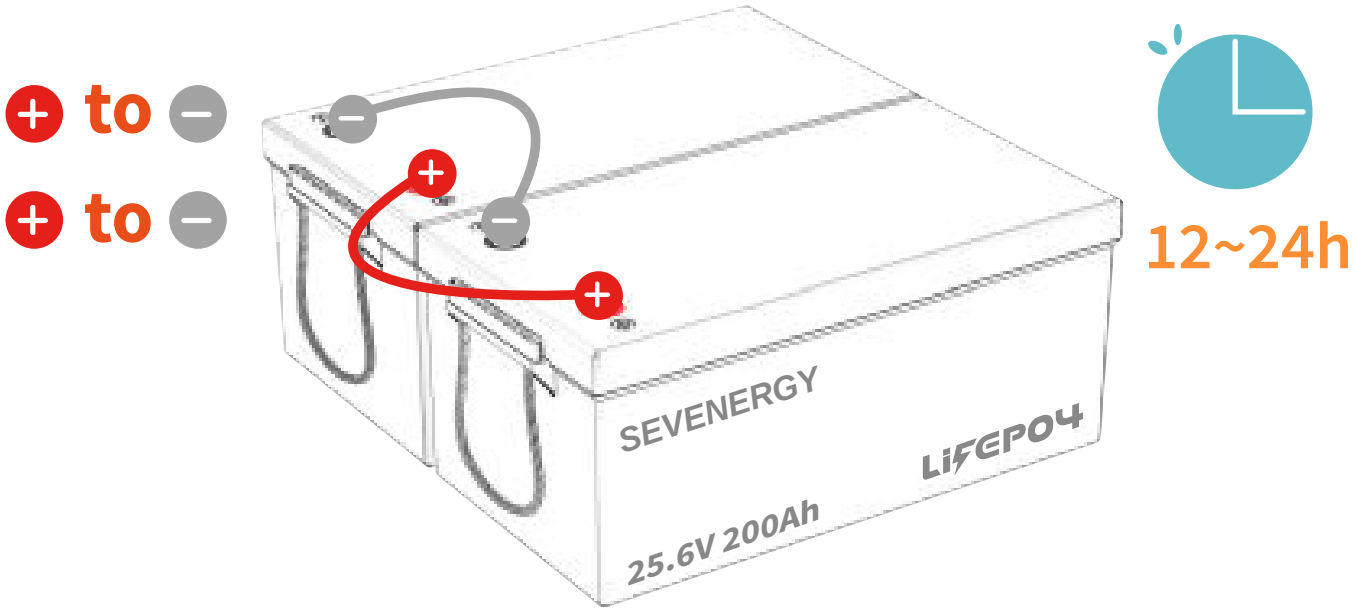

Refer to printed page 14 for terminal bolt installation and torque.


Step 4

After the voltage is balanced, remove the screws of the battery and connect the batteries in parallel first. (Take 2S4P as an example, first connect the 8 batteries 1#, 3#, 5#, 7# and 2#, 4#, 6#, 8# in parallel to form 2 battery systems.)

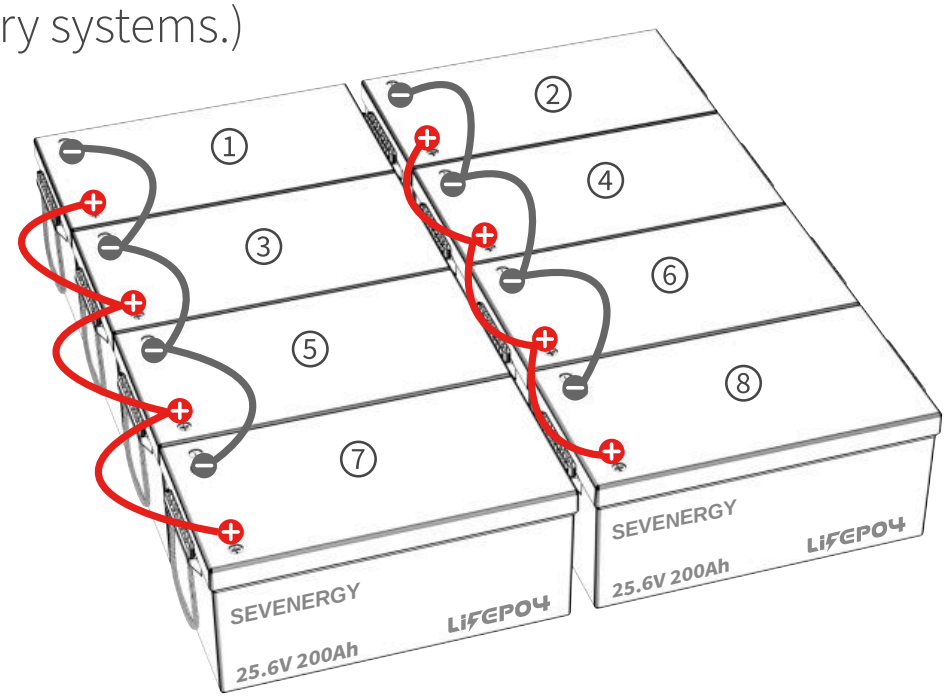


Step 5

Connect the two battery systems in series. Connect the negative pole of 1# and the positive pole of 2# in series, 3# and 4#, 5# and 6#, 7# and 8# and so on.

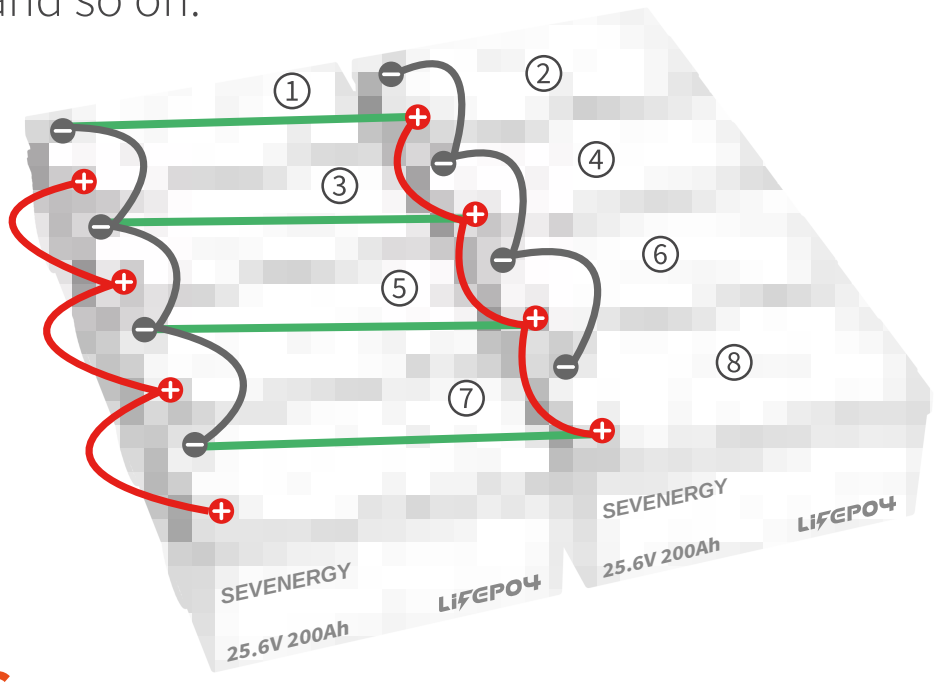

Step 6

Connect the positive poles of 1#, 3#, 5#, 7# and the negative poles of 2#, 4#, 6#, 8# to the busbars that match the current power. Then connect the busbar + and busbar - to the power supply end and the load end respectively.

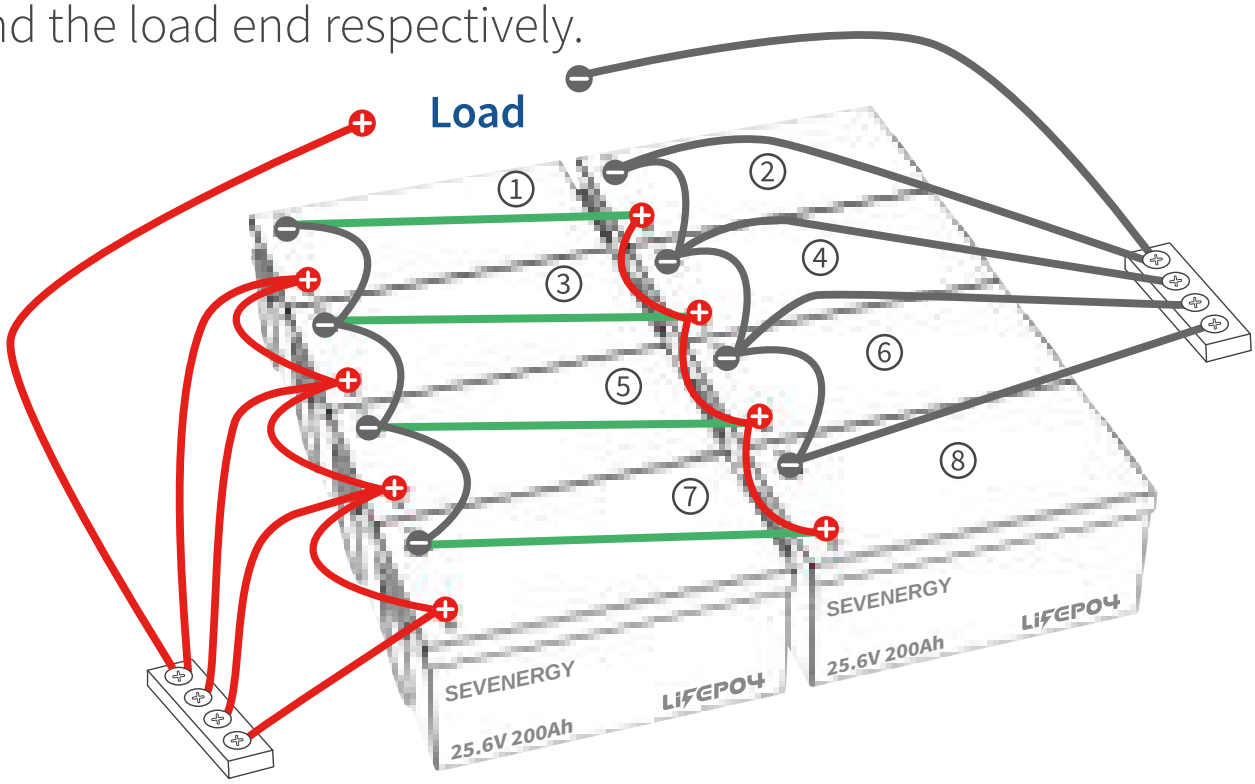

4P2S 48 (51.2V)800Ah Battery System

Note: It is recommended to periodically re-balance the battery voltages every six months when connecting multiple batteries as a battery system. Slight voltage differences can occur among batteries over time due to factors like battery chemistry, capacity, temperature, and usage patterns.
Please refer to Table 1 for the voltage, capacity parameters and maximum number of series and parallel connections.
Note that the cable connection methods provided below are for reference purposes only, as the optimal approach may vary depending on the specific situation. It is essential to consider various factors, such as the cable size, equipment used, and environmental conditions.

Battery System Energy	24V (25.6V)400Ah 10240Wh	1S2P
Battery System Energy	48V (51.2V)200Ah 10240Wh	2S1P
Battery System Energy	48V (51.2V)400Ah 20480Wh	2S2P

Table 1


Battery Charging and Discharging Logic

The battery may be received at a partial state of charge (SOC) depending on the time between manufacturing and shipping. It is crucial to fully charge the battery before its initial use. In case the battery shuts off due to low SOC, promptly disconnect it from loads and charge it to prevent irreversible damage. Follow the instructions in this user manual for proper charging and usage to ensure optimal battery performance and longevity

Charging Logic

The standard charging process for the battery involves charging at a constant current of 40A until the battery voltage reaches 28.8V, followed by charging at a constant voltage of 28.8V while tapering the charge current. The charging process is considered complete when the charge current is less than 10.3A (also known as tail current).

The standard charging process typically takes 5 hours. Charge only when the battery temperature is between 32°F and 122°F (0°C and 50°C). Leaving the battery on float will continue to balance the battery cells without damaging the battery.

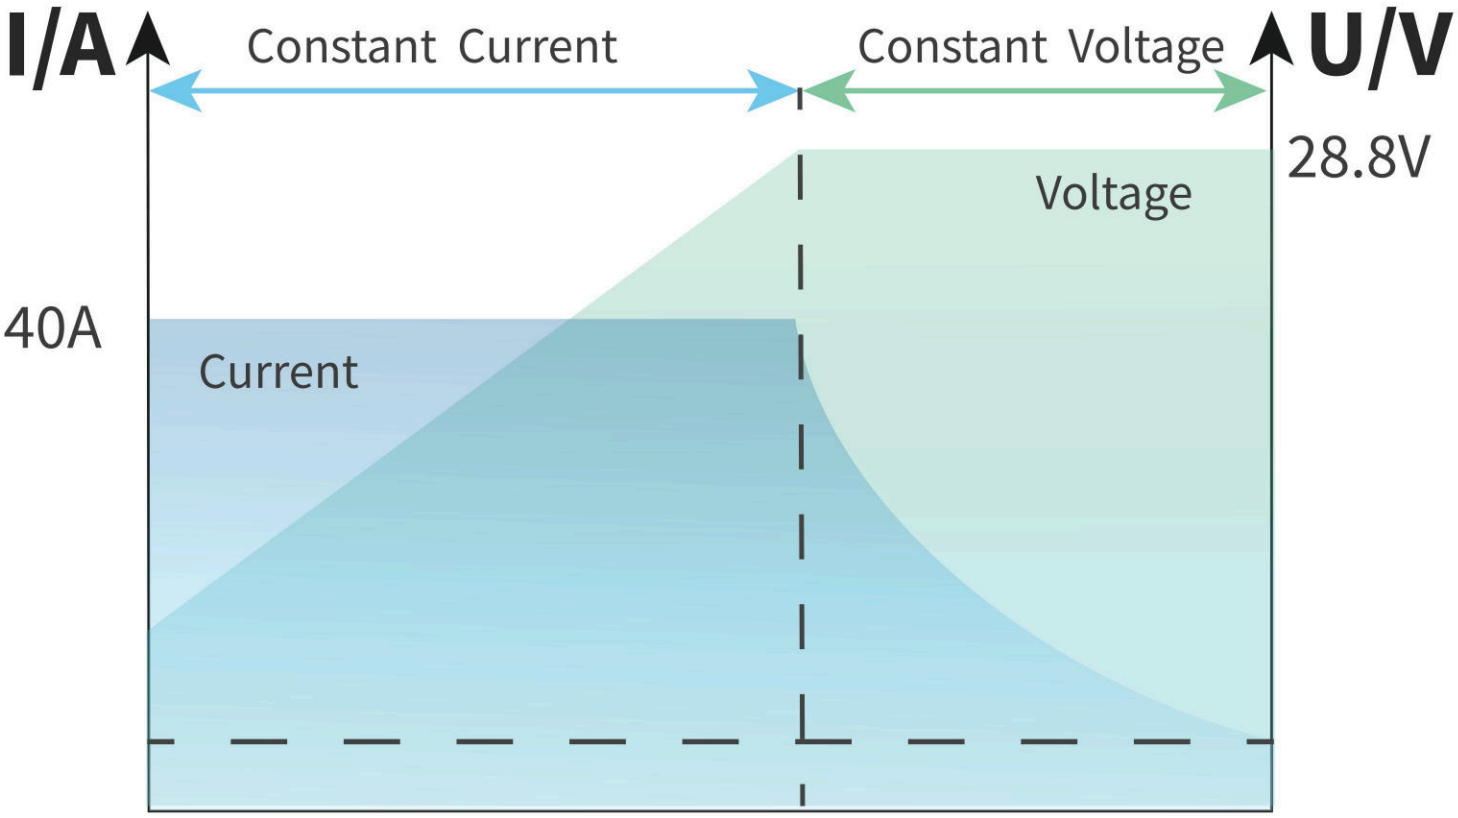

- Lithium batteries are compatible with various charging methods, including MPPT charge controller, AC charger, and DC-DC charger. The crucial parameter setting for these chargers is to set the charge voltage, boost voltage, or bulk voltage at 28.8V.
- Do not overcharge or over-discharge the battery.
- Do not discharge the battery at high temperatures above 131°F (55°C).
- Only charge the battery with a battery charger or charge controller that is compatible with lithium iron phosphate batteries.
- Do not exceed the maximum continuous charge current (200A) of the battery. (When using a single unit).

Discharging Logic

During standard discharging, the battery is discharged at a constant current of 40A until the voltage drops to 20.4V. To ensure safe discharging, the battery temperature should be between -4°F (-20°C) and 131°F (55°C).

- To ensure safe and optimal battery usage, it is recommended to pair the battery with discharge equipment that features a low voltage disconnect (LVD) function.
- Do not connect large loads to the battery when it is running low.
- When the SOC of the battery is >30%, the maximum discharge current can be based on the parallel number of batteries *200A. When the battery's SOC≤30%, it can only support 200A discharge.

SOLAR PANELS & CONTROLLER

Solar panels

Recommended solar array power: at least 1200W for a single battery.

Charging time depends on sunlight, controller efficiency and system losses. The original estimate uses 4.5 effective sunlight hours per day; actual charging may take longer.

Controller

Recommended charging current:

40A (0.2C)	Approx. 5 hours to 100% capacity.
100A (0.5C)	Approx. 2 hours to around 97% capacity.

Battery system: 24V nominal (25.6V), LiFePO4

Controller settings

Use a controller compatible with a 24V LiFePO4 battery system. Configure the following charging and discharge settings.

Setting	Value
Charge voltage	28.4-28.8V
Over-voltage disconnect	28.8V
Over-voltage reconnect	27.6-28.4V
Tail current	10.3A
Under-voltage warning	23.2V
Under-voltage recover	22-23V
Low-voltage disconnect	20.4V

BATTERY CHARGER

Use a lithium iron phosphate (LiFePO4) battery charger compatible with this 25.6V battery.

Recommended charging voltage: 28.4-28.8V

Recommended charging current:

40A (0.2C)	Approx. 5 hours to 100% capacity.
100A (0.5C)	Approx. 2 hours to around 97% capacity.

Tips

Connect the charger to the battery before connecting it to the AC power supply. Disconnect the charger after the battery is fully charged.


ALTERNATOR / GENERATOR

Connect a suitable DC-DC charger between the alternator or generator and the battery.

Recommended charging voltage: 28.4-28.8V

Recommended charging current:

40A (0.2C)	Approx. 5 hours to 100% capacity.
100A (0.5C)	Approx. 2 hours to around 97% capacity.

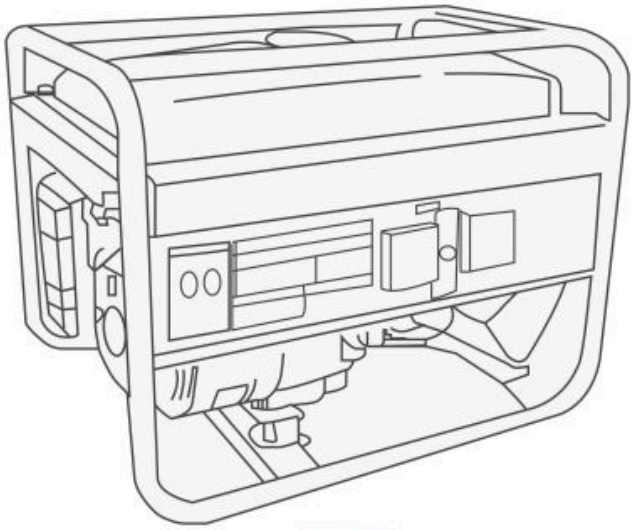

ESTIMATING BATTERY SOC

The SOC values listed below are estimated based on the open circuit voltage when the battery is at rest for 30 minutes, not in charging or discharging state.

SOC	Open Circuit Voltage	SOC	Open Circuit Voltage
100%	27.00V	40%	26.30V
99%	26.80V	30%	26.10V
90%	26.70V	20%	26.00V
80%	26.60V	14%	25.60V
70%	26.50V	9%	25.50V
60%	26.46V	5%	25.00V
50%	26.40V	0%	23.20V

The table above is for reference only because slight variations in battery voltage may occur among different batteries.

TROUBLESHOOTING

Problem	Possible causes	Solution
Battery cannot be activated, or open-circuit voltage is abnormally low.	Severe over-discharge caused by self-discharge or parasitic loads.	Use a battery charger or charge controller with lithium-battery activation or force-charging capability.
Battery shuts off due to under-voltage protection.	Battery voltage drops below the preset threshold.	Disconnect the battery from loads and charge it with a current greater than 1A as soon as possible.

Troubleshooting continues on printed page 27.

TROUBLESHOOTING (CONTINUED)

Problem	Possible causes	Solution
Charging stops due to over-voltage protection.	Battery voltage exceeds the preset charging threshold.	1. Disconnect the charging source. 2. Reduce the charging voltage by 0.2-0.4V for 6 hours. 3. Retry charging at the correct voltage. If the issue persists with a compatible LiFePO4 charger, repeat these steps.
High- or low-temperature protection is triggered.	Battery temperature exceeds the preset operating limits.	1. Disconnect the charging source or loads. 2. Allow the battery to cool down or warm up. 3. Operation resumes automatically when the battery returns to its permitted temperature range.
Short-circuit protection is triggered.	A short circuit occurs in the battery circuit.	1. Remove the short circuit. 2. Charge the battery with a current greater than 1A.
Charge or discharge over-current protection is triggered.	Excessive current flows through the battery during charging or discharging.	Disconnect the charging source or loads as soon as possible.

MAINTENANCE & INSPECTION

Inspection

Inspect the battery regularly. Check that the housing and terminals are clean, dry and free of corrosion. Check the cables and connections; replace damaged cables and tighten loose connections.

Corrosion can increase resistance and cause poor contact. Apply suitable insulation grease to the terminals as required to help resist moisture and corrosion.

Cleaning

- Disconnect the battery from the system.
- Remove leaves and debris from the battery.
- Clean with a soft, lint-free cloth. If necessary, dampen the cloth with water or mild soap and water.
- Dry the battery with a soft, lint-free cloth.
- Keep the surrounding area clean, then reconnect the battery.

Checking voltage

Check battery voltage periodically. If the battery cannot be activated or shows signs of severe over-discharge, stop using it and contact SEVENERGY support. Do not resume use until the fault has been resolved and the battery can be charged.

Storage

Follow these tips to keep the battery in good condition during storage:

- Charge the battery to 30%-50% SOC.
- Disconnect the battery from the system.
- Store in a well-ventilated, dry, clean area between -4°F (-20°C) and 113°F (45°C).
- Do not expose the battery to direct sunlight, moisture or precipitation.
- Handle carefully. Avoid sharp impacts or extreme pressure on the housing.
- Charge at least once every 3-6 months to prevent over-discharge.
- Fully charge the battery when it is taken out of storage.

Important safety instructions

SEVENERGY accepts no liability for damage caused by:

- Force majeure, including fire, typhoon, flood, earthquake, war and terrorism.
- Intentional or accidental misuse, abuse, neglect, improper maintenance or use under abnormal conditions.
- Improper installation or operation, or malfunction of a peripheral device.
- Contamination with hazardous substances or radiation.
- Alterations to the product without express written consent from the manufacturer.

FCC Statement

Inspection

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

(1) Reorient or relocate the receiving antenna.
(2) Increase the separation between the equipment and receiver.
(3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
(4) Consult the dealer or an experienced radio/TV technician for help.

(FCC ID: 2BOVI-MOTLFP256)

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

BLUETOOTH APP

Connect to your battery via Bluetooth with the SEVENERGY app.

Step 1: Download and open the app

Scan the QR code below. Open the app after installation. No account required.

mysevenergy.com/app/



SEVENERGY

Download on the App Store

GET IT ON Google Play


Step 2: Select your battery and connect

Turn on Bluetooth and allow permissions. Tap Reconnect on the Overview screen.


Select your battery under Nearby batteries, then view its status in Overview.



BLUETOOTH

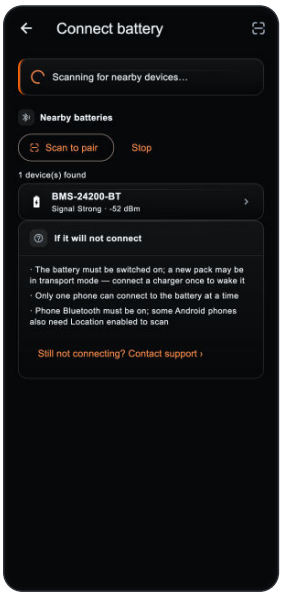

Select battery

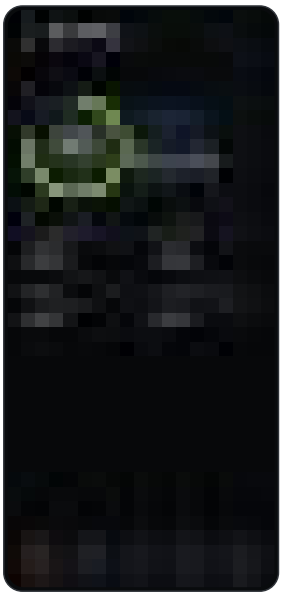

Connected

Screens shown in English. Device names and readings are examples.